

Safe Inflatable Operating Rules

Fire Marble Slide

Protect the participants

You are liable for the safety of the participants on your property.

Adult supervision at the unit's entrance is required at all times. **DO NOT LEAVE CHILDREN UNATTENDED!**

- Separate children by age group, if possible. Assist small children on and off the unit.
- Slides are **SINGLE SLIDER ONLY**, on your bottom, feet first.
- Do not jump from the top of the slides to the bottom.
- Do not allow participants to ride on laps down slides. Single sliders only!
- Do not allow participants to climb on top, on sides, on netting, or in any way not intended for safe use.
- Jumping on the inflatable step area of the unit is not allowed.
- Horseplay, rough or aggressive behavior, flips, cartwheels, stunts, wrestling, or any other behavior could lead to physical injury.

If wind exceeds 20 miles per hour or lightning is near:

Immediately **STOP** participants from sliding and have them exit the unit.

Turn the blower motor off.

Once the weather subsides:

Turn the blower back on and wait for the unit to completely inflate before letting any participant back on.

Protect the unit

If our team finds evidence that prohibited items were in the unit when picked up at your location, a \$75 cleaning fee will apply.

- Never exceed the weight capacity located on the unit.
- Empty pockets and remove cross-body purses, jewelry (necklaces, bangles/bracelets, dangling pierced earrings, etc), shoes, watches, glasses, or sharp objects before entering the unit.
- Items not permitted in or on the unit include, but are not limited to, animals, food, drink, paint, glitter, confetti, gum, or silly string.

You are responsible for damages as outlined in your rental agreement, up to and including the replacement cost of the inflatable unit. Our team will complete a full report of damages during pickup.

Troubleshooting

If you need us to return to help troubleshoot, a \$20 service fee will apply.

Air Blowers should run continuously during inflatable operation.

If air pressure seems low:

- Ensure all blower tubes are closed or securely around the blower's nozzle.
- Ensure all zippers are closed and velcroed shut.
- Check if the air supply tube (from blower to unit) is straight, without bends or twists.

If the blower stops:

- Remove participants from the unit.
- Determine if the cord is plugged in. Do not plug or unplug the motor repeatedly. This will cause the unit to burn up.
- Check the breaker panel box for a tripped circuit or blown fuse.

Inflatable unit must always be anchored to the ground with ropes tied to stakes and should never be untied.

Do not move our equipment once we've set it up. This increases the risk of accidents and voids our insurance.

Our equipment can only be set up or moved by our trained employees.

Safe Inflatable Operating Rules

Slip 'N Slide Air

Protect the participants

You are liable for the safety of the participants on your property.

Adult supervision at the unit's entrance is required at all times. **DO NOT LEAVE CHILDREN UNATTENDED!**

- Assist small children on and off the unit.
- Unit is **SINGLE SLIDER ONLY**, on your belly, head first.
- Do not jump off the sides of the unit.
- Do not allow participants to slide together. Single sliders only!
- Do not allow participants to climb on sides, pull on attachments, or use the device in any way other than intended.
- Jumping on the inflatable unit is not allowed.
- Horseplay, rough or aggressive behavior, flips, cartwheels, stunts, wrestling, or any other behavior could lead to physical injury.

If wind exceeds 20 miles per hour or lightning is near:

Immediately **STOP** participants from sliding and have them exit the unit.

Turn the blower motor off.

Once the weather subsides:

Turn the blower back on and wait for the unit to completely inflate before letting any participant back on.

Protect the unit

If our team finds evidence that prohibited items were in the unit when picked up at your location, a \$75 cleaning fee will apply.

- Never exceed the weight capacity located on the unit.
- Empty pockets and remove cross-body purses, jewelry (necklaces, bangles/bracelets, dangling pierced earrings, etc), shoes, watches, glasses, or sharp objects before entering the unit.
- Items not permitted in or on the unit **include, but are not limited to**, animals, food, drink, paint, glitter, confetti, gum, or silly string.

You are responsible for damages as outlined in your rental agreement, up to and including the replacement cost of the inflatable unit. Our team will complete a full report of damages during pickup.

Troubleshooting

If you need us to return to help troubleshoot, a \$20 service fee will apply.

Air Blowers should run continuously during inflatable operation.

If air pressure seems low:

- Ensure all blower tubes are closed or secured around the blower's nozzle.
- Check if the air supply tube (from blower to unit) is straight, without bends or twists.

If the blower stops:

- Remove the participants from the unit.
- Determine if the cord is plugged in. Do not plug or unplug the motor repeatedly. This will cause the unit to burn up.
- Check the breaker panel box for a tripped circuit or blown fuse.

Inflatable unit must always be anchored to the ground and should never be unanchored.

Do not move our equipment once we've set it up. This increases the risk of accidents and voids our insurance.

Our equipment can only be set up or moved by our trained employees.